# LTDB 5 Series

# ID Infinity Drain

## LTDB 5 | Tile Drain Series


- 16 gauge 304 Stainless Steel top with ABS Base
- Indoor or outdoor use
- Residential grade bonded flange (PVC or ABS) with 2" throat
- Bonded Flange connects to 2", 3" or 4" waste line
- Uses Liquid and Fabric Sheet Membrane waterproofing (not hot mop)
- Grate can be removed completely for cleaning
- Accepts flooring material up to 3/8" thick
- Requires traditional 4-way floor pitch
- Integral hair strainer
- Flow rate 8 GPM

### Finishes:

- Satin Stainless
- Polished Stainless



## Installation (TD) Center Drain

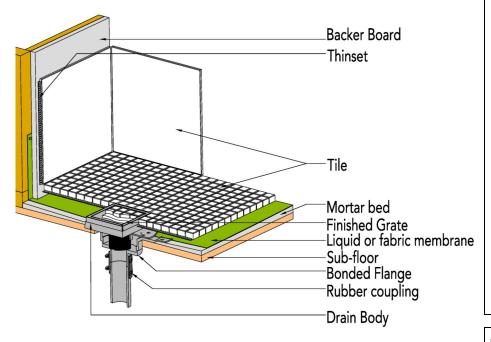

#### **Infinity Drain**

18 Secatoag Avenue Port Washington, NY 11050 Phone: 516.767.6786 Fax: 516.740.3066 www.InfinityDrain.com



ID INFINITY DRAIN

CANADA - CSA B 125.2
USA - ASME A112.18.2



#### **Complete Kits:**

LTD5 BA SS Bonded Flange ABS Drain LTD5 BA PS Bonded Flange ABS Drain LTD5 BP SS Bonded Flange PVC Drain LTD5 BP PS Bonded Flange PVC Drain

### Components:


LT5-2 SS 5" x 5" Strainer Only LT5-2 PS 5" x 5" Strainer Only


BFA 22 Bonded Flange ABS BFP 22 Bonded Flange PVC

**Note:** Installer must verify all rough-in dimensions prior to installation and consult local and national codes. Conformity and compliance to local and national codes are the responsibility of the installer.
 
# LTDB 5 Specifications



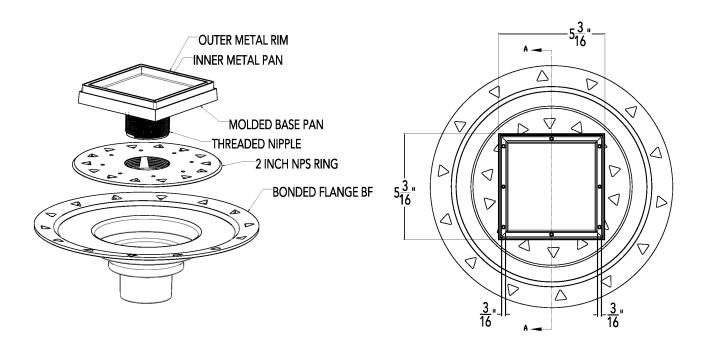



#### LTD5-BA

5" x 5" Kit with PVC Drain Body 2" Outlet

(5" L x 5" W x 1" H)

- 1 LT5-2 Tile Drain Strainer
- 1 BFA 22 Bonded Flange ABS Drain

### LTD5-BP

5" x 5" Kit with PVC Drain Body

2" Outlet

 
 $(5"L \times 5"W \times 1"H)$ 

- 1 LT5-2 Tile Drain Strainer
- 1 BFP 22 Bonded Flange PVC Drain

 
#### **Infinity Drain**

18 Secatoag Avenue Port Washington, NY 11050 Phone: 516.767.6786 Fax: 516.740.3066 www.InfinityDrain.com









### **SECTION A-A**

**Note:** Installer must verify all rough-in dimensions prior to installation and consult local and national codes. Conformity and compliance to local and national codes are the responsibility of the installer.

Page 2 of 2