

# FX Series

**FXED 65, FXDG 65, FXMN 65, FXAS 65, FXAS 125, FXTIF 65 Installation**

## Parts List

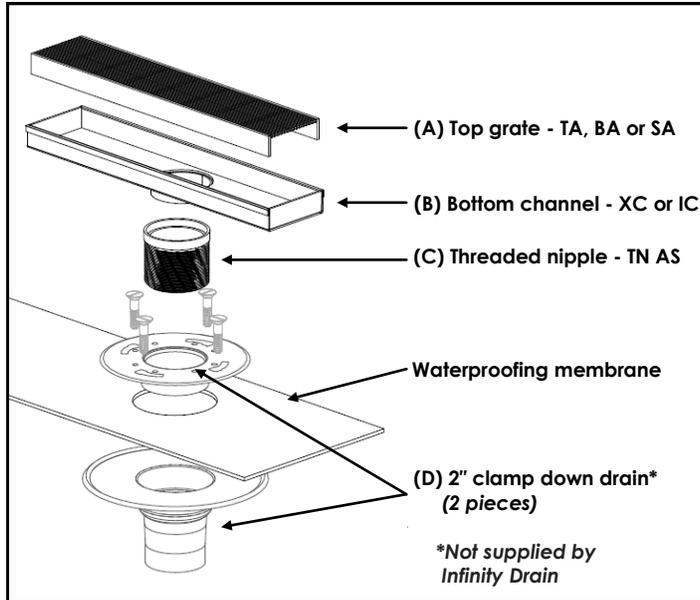


Figure 1

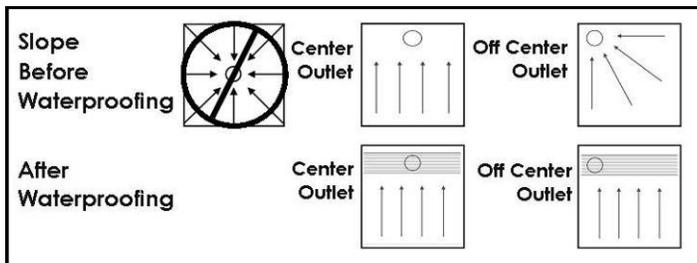


Figure 2

## Determining floor height

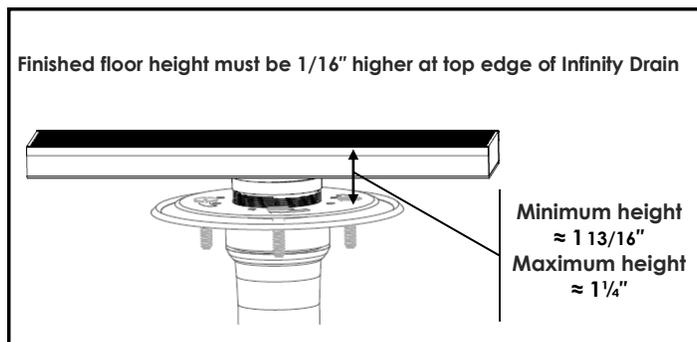


Figure 3

## Installation Instructions

1. Determine clamp down drain (D) location.  
NOTE: A CDI 43 - Clamp Down (4" Throat, 3" outlet) is ONLY provided with the FXAS125 Series. The other FX Series kits will not include a clamp down drain.
2. Create pre-slope and waterproof to local code.
3. Screw threaded nipple (C) into clamp down drain (D). Place bottom channel (B) into threaded nipple (C). Adjust to desired height. (Tile finished 1/16" higher than channel)
4. Set channel (B) into a mortar bed and level. Apply a bead of silicone to the outside of the channel (B) outlet, then press channel (B) outlet into threaded nipple (C) to create a seal.
5. Confirm that channel (B) is leveled.
6. Spread mortar bed, slope 1/4" per foot away from drain in a single plane. Prior to tiling, run a bead of silicone around the channel edge.
7. Finish tiling, allowing tile to finish 1/16" higher than channel/grate.
8. Before installing tile inside the TA 65 grate, use a thick mortar mix inside grate, allowing space for tile's thickness and thinset. Allow mortar to dry overnight. Once dry, apply thinset and tile. Tile should finish off a maximum 1/16" above grate's edge.
9. Allow to set for 36 hours before using.

*Infinity Drain recommends this product be installed by a licensed contractor*

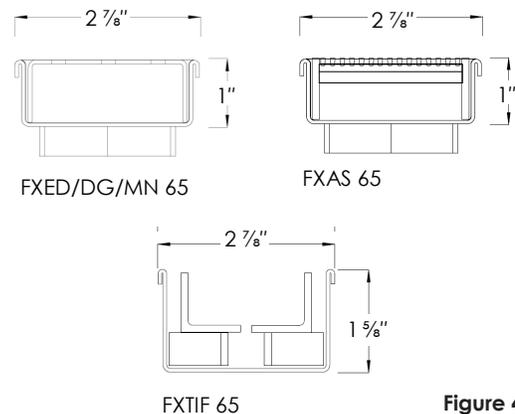


Figure 4

**Clamp down drain is not supplied by Infinity Drain**