

# WW 5 Series

## WW 5, WW5-2 Installation

### Parts List

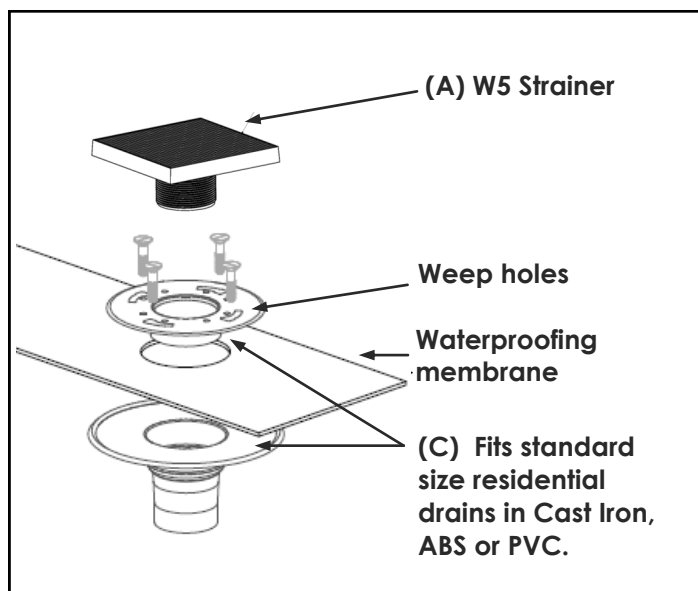


Figure 1

### Installation Instructions

1. Determine clamp down drain (C) location. Connect to drain pipe.
2. Create a pre-slope in four directions towards drain body (C). Waterproof to local code.
3. Insert W5 Strainer (A) into clamp down drain (C) and adjust height as needed. Allow secondary mortar bed to support W5 Strainer (A).
4. Finish floor must be 1/16" higher than top edge of W5 Strainer (A).

*Infinity Drain recommends this product be installed by a licensed contractor*

### Determining floor height

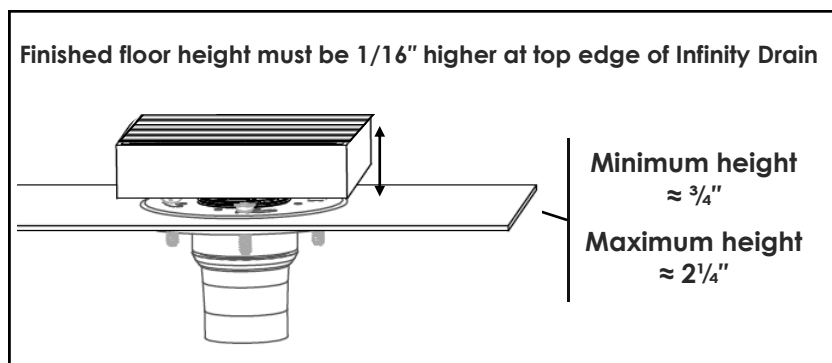


Figure 2

